




[www.HandA-Accessories.com](http://www.HandA-Accessories.com)

# Outside Temperature Gauge Operator Instructions

# ACCORD


(Except 4-cylinder EX models with leather interior and all 6-cylinder EX models)

## Gauges

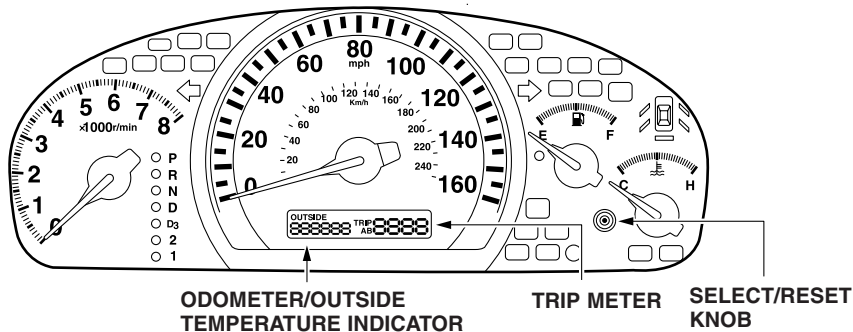

### Odometer/Outside Temperature Indicator

The odometer and the outside temperature indicator use the same display. This indicator displays the outside temperature in Fahrenheit. To see the outside temperature, press and release the Select/Reset knob until the temperature is displayed. When you turn the ignition switch to ON (II), what you last selected is displayed.

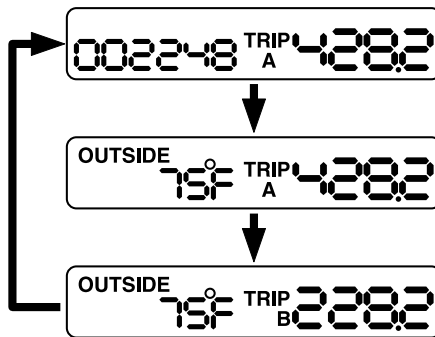

The temperature sensor is located in the front bumper. Therefore, the temperature reading can be affected by heat reflection from the road surface, engine heat, and the exhaust from surrounding traffic. This can cause an incorrect temperature reading when your speed is under 19 mph.

In certain weather conditions, temperature readings near freezing (32°F) could mean that ice is forming on the road surface.



**HONDA**  
The Power of Dreams