

## CD Changer for Pilot LX Installs in Some EX Models

The accessory 6-disc, in-dash CD changer for '03–04 Pilot LX models (P/N 08A06-3B1-300, H/C 6223176) can be installed in some EX and EX-L models, but there are a few things to consider before going that route:

- The audio unit display always shows **DISC 1** playing no matter which disc you're actually playing.
- To change discs, you must use the **SEEK/ SKIP** buttons. The **DISC -** and **DISC +** buttons don't work. Look at the changer to tell which disc is playing.
- To install the changer in '03 Pilot EX and EX-L models and '04 Pilot EX models, you need to also install a DVD DIN Bezel Kit (P/N 08B23-S9V-100A, H/C 7313034).
- The CD changer doesn't fit in '03–04 EX-L models with navi or the DVD entertainment system; there's just not enough room in the dashboard for it. Nor does it fit in '04 EX-L models without navi or the DVD entertainment system; the seat heater switches are in the way.