
 HONDA INSTALLATION INSTRUCTIONS	Accessory SIMULATED WOOD AUDIO PANEL P/N 08Z03-S10-100F	Application 2000 CR-V	Publications No. All 20652
			Issue Date OCT 1999

PARTS LIST

Wood audio panel

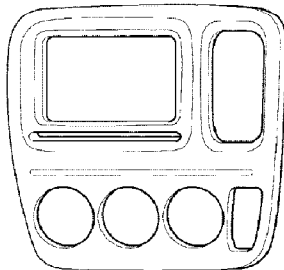

SUPPLIES REQUIRED


Isopropyl alcohol
 Shop towel (soft cloth)

INSTALLATION

NOTE: The audio panel should be installed only when the ambient air temperature is 60°F (15°C) or above.

- Using isopropyl alcohol on a clean shop towel, thoroughly clean the mating surfaces on the existing vehicle audio panel.
- Remove all **inner** adhesive tape backings from the wood audio panel. Peel one inch from the end of each adhesive backing from the **outer** adhesive tapes and fold them back as shown.

Back of the wood audio panel

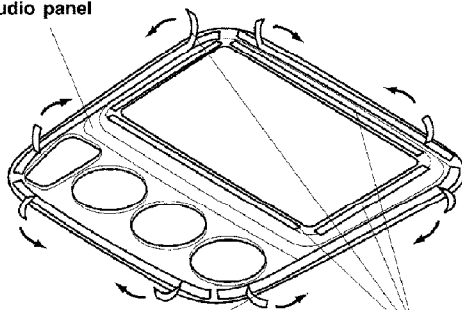


Peel back one inch from the end of each **outer** adhesive tapes.

Remove all of the **inner** adhesive backings.

- Attach the wood audio panel to the vehicle audio panel:

- Position the wood audio panel on the vehicle audio panel, and adjust its location. When you are satisfied that the audio panel is positioned properly, hold light pressure against the center of the wood panel to hold it in position.
- While holding light pressure against the wood audio panel on the vehicle panel, slowly and carefully remove each piece of adhesive backing.

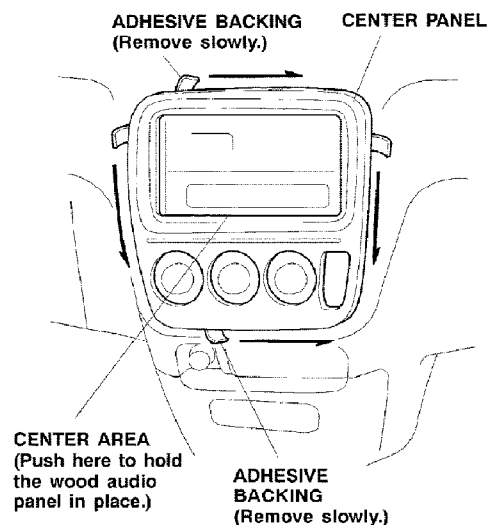

- Using the palm of your hand, firmly push the wood audio panel against the vehicle audio panel in several places where the adhesive tapes are attached.