

HONDA INSTALLATION INSTRUCTIONS

Accessory

HARD SPARE TIRE
COVER DECAL
P/N 08F30-S10-100H

Application

1997 CR-V

Publications No.


All 18540

Issue Date

FEB 1997

PARTS LIST

Spare tire cover decal

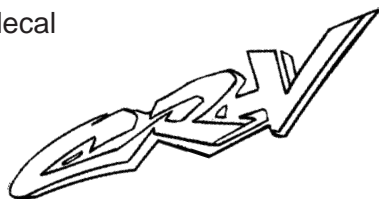

TOOLS AND SUPPLIES REQUIRED

Contact cleaner

Shop towel

Squeegee

Spray bottle

Neutral detergent solution

(One part detergent and 100 parts water mixed in a spray bottle)


INSTALLATION

Before You Begin:


- This decal should be installed only when the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive time to cure, do not wash the vehicle for 24 hours.

Illustration of the Spare Tire Cover Decal Installed on the Vehicle

HARD SPARE TIRE COVER
(Sold separately)

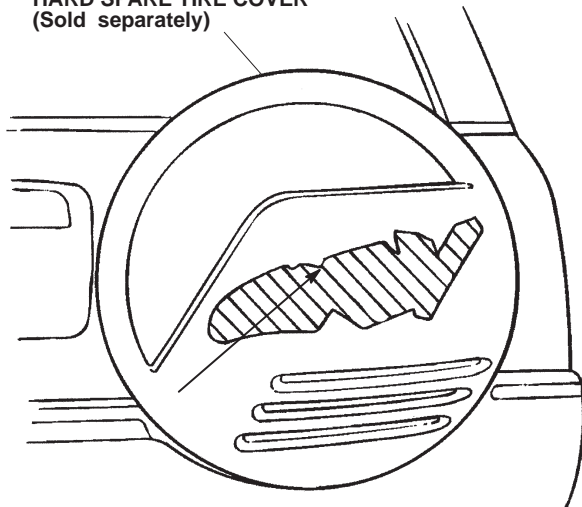


1. Using contact cleaner on a shop towel, thoroughly clean the area where the decal will attach.
2. Spray the detergent solution on the spare tire cover where the decal will attach.

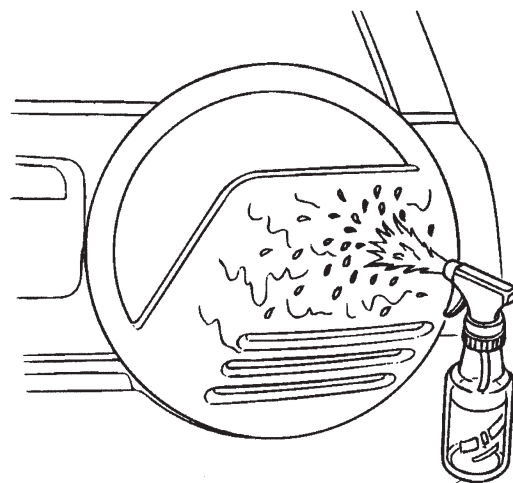


DETERGENT SOLUTION
(1:100 Mixture)

3. Completely remove the adhesive backing from the decal while spraying detergent solution. Do not remove the outer protective film yet.

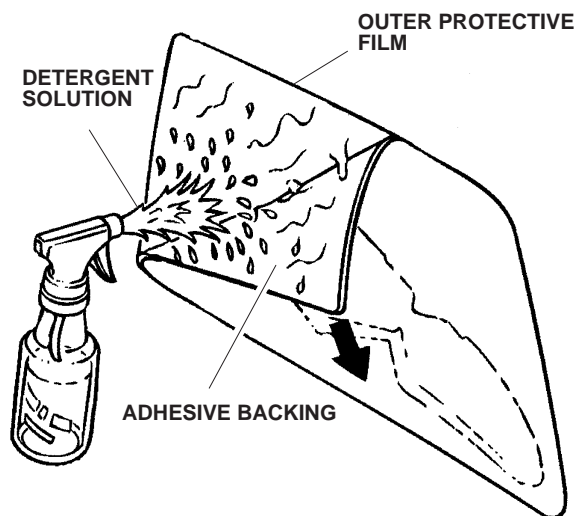



4. Position the decal on the cover, and align the upper and side edges with the line on the cover.

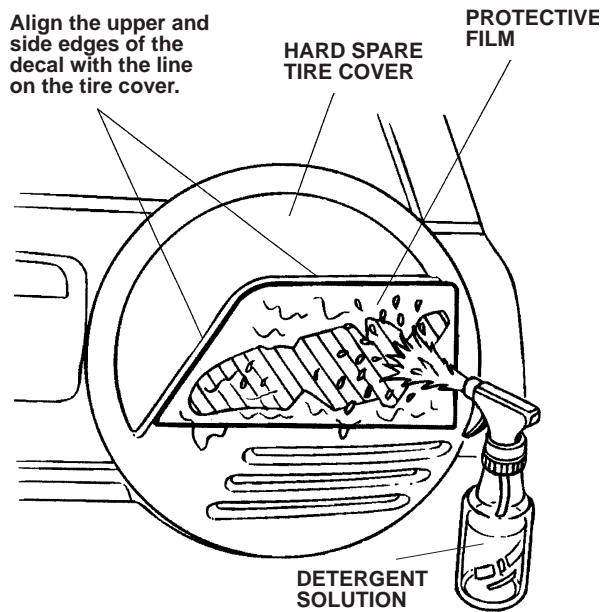

5. When you are satisfied that the decal is set properly, spray the detergent solution over the outer protective film.

6. Using a squeegee, squeeze trapped air and the detergent solution out from under the decal starting at the center and working toward the ends.

- Wipe up the excess detergent solution with a shop towel.
- Check that there are no air bubbles trapped under the decal; remove them as necessary.

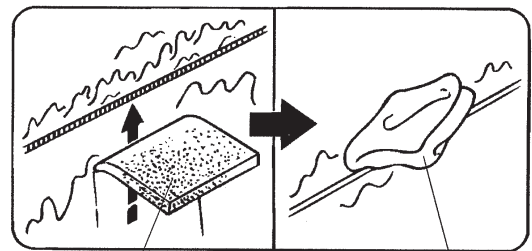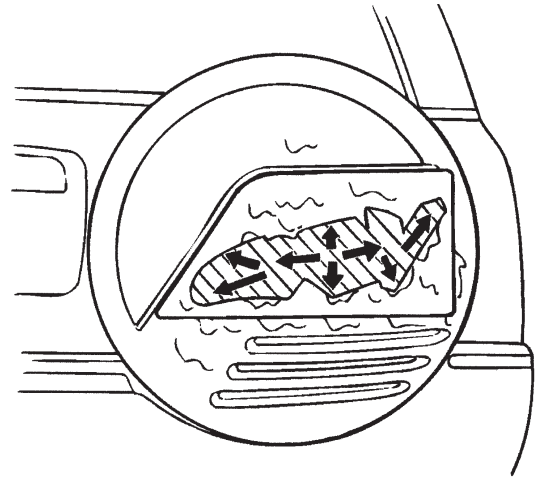

SQUEEGEE

Wipe up the excess detergent solution with a shop towel.

7. Remove the outer protective film from the decal.

NOTE: After the decal is installed, tell your customer not to wash the vehicle for 24 hours to give the adhesive time to cure.