



INSTALLATION INSTRUCTIONS


Accessory INTERIOR TRIM KIT P/N 08213-SCV-100C P/N 08213-SCV-110A

Application ELEMENT


Publications No. All 33128
Issue Date AUG 2006

PARTS LIST


Center trim

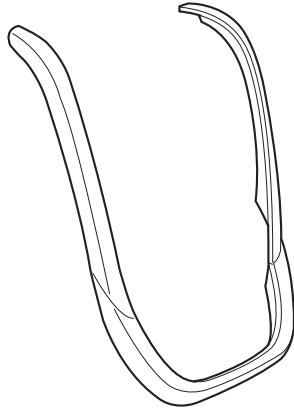


Meter trim

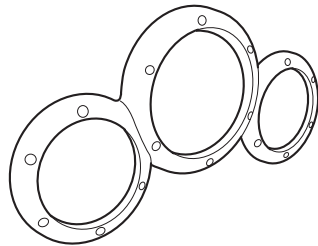


Air outlet trim

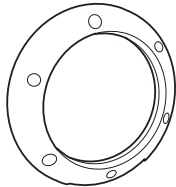

Driver's door switch trim

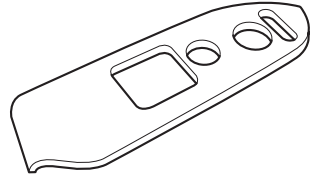

Passenger's door switch trim

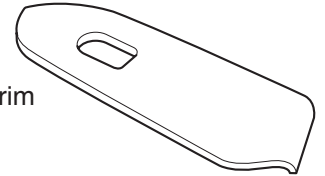

SUPPLIES REQUIRED

- Isopropyl alcohol
- Shop towel
- Masking tape

INSTALLATION

NOTE:


- Be careful not to damage the body paint finish.
- Install this interior trim kit only if the outside air temperature is 60°F (15°C) or above.

- Using isopropyl alcohol on a shop towel, clean the areas where the interior trims will attach.
- Attach a strip of masking tape to the end of each outer adhesive backing, and peel back about 2 to 3 cm (1/2 to 1 in.) of the adhesive backing. Fold the ends back, and tape them to the front of the trim pieces. Remove and discard the inner adhesive backing.
- Position the interior trim pieces on the existing panels. While applying light pressure to the inner panels, carefully remove the adhesive backing from the interior trim.
 - Before installing the switch trim, check that the hole in the panel is aligned with the switch hole.
 - Install the outlet trim so that the line drawn across the top and bottom recesses is vertical with the chipped end facing down.
- After installing the trim, use the palm of your hand to hold pressure against each piece for 30 seconds.

Left Switch Trim:

OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]

LEFT SWITCH TRIM

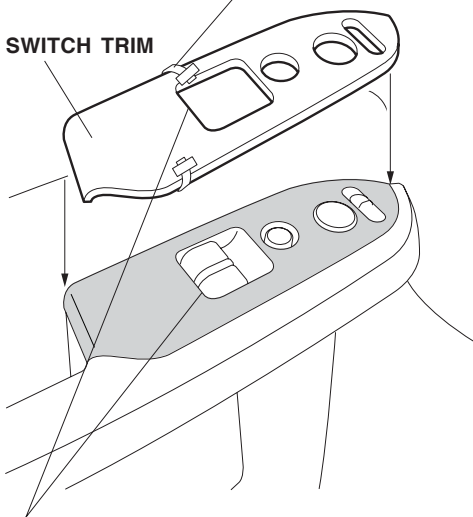


Check that the hole in the switch trim is aligned with the switch hole.

Right Switch Trim:

OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]


RIGHT SWITCH TRIM

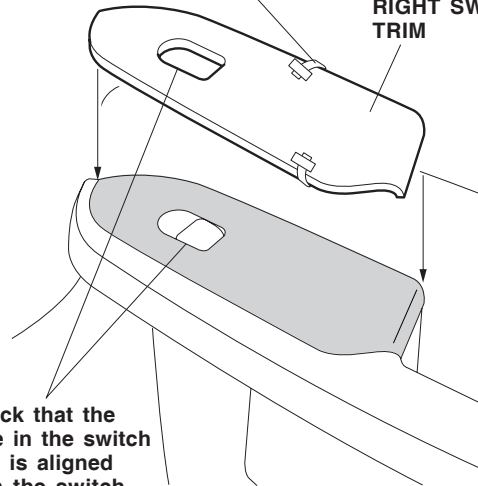

Check that the hole in the switch trim is aligned with the switch hole.

Right and Left Air Outlet Trims:

OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]

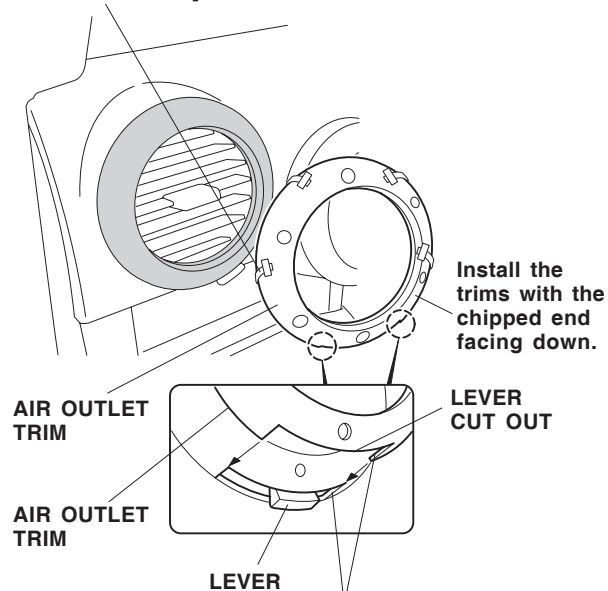


Install the trims with the chipped end facing down.

LEVER

Install the trims so that the cutout on the bottom matches the lever.


Center Trim:

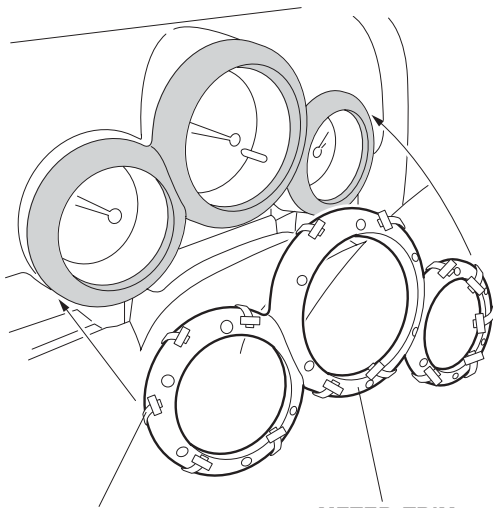

OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]

METER TRIM

Meter Trim:

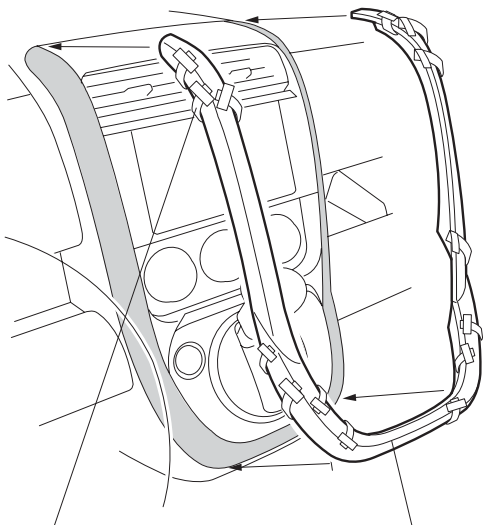

OUTER ADHESIVE BACKING
[Peel back 2 to 3 cm (1/2 to 1 in.) from the end, and tape it to the front of the trim.]

CENTER TRIM

USE AND CARE

Use a sponge or soft cloth dampened with mild detergent and water solution. After cleaning, wipe with a clean, soft cloth. Do not use cleaners or polishers containing abrasive compounds to clean the interior trims as they may damage the surface.