



# INSTALLATION INSTRUCTIONS

Accessory

WOOD SELECT LEVER  
P/N 08U92-S9V-100

Application

PILOT

Publications No.


All 23639

Issue Date

MAY 2002

## PARTS LIST

Shift knob

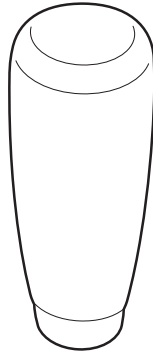


## SUPPLIES REQUIRED


Electrical tape

## INSTALLATION


1. Remove the existing shift knob by turning it counterclockwise.

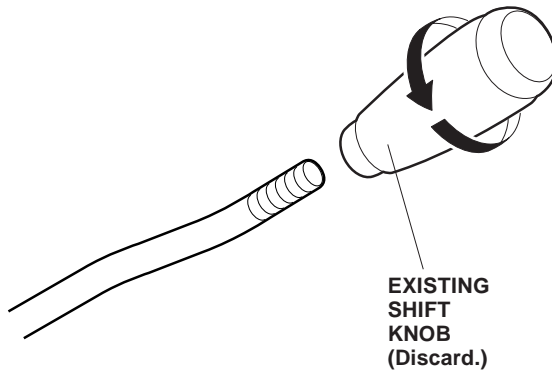

2. Attach a piece of electrical tape on the new shift knob as shown.

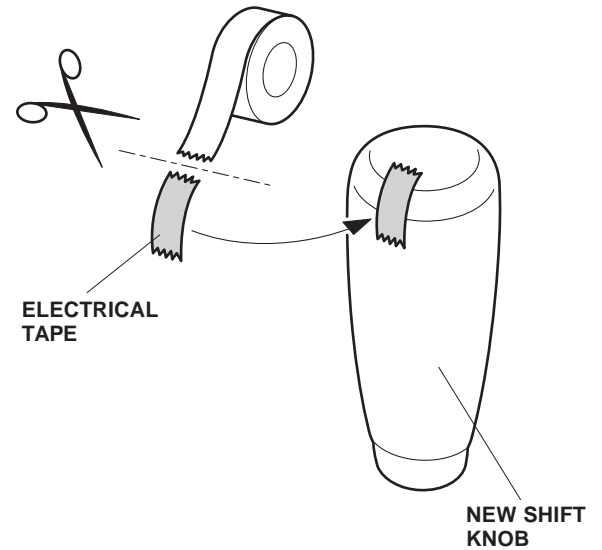

3. Thread the new shift knob onto the shift lever 9 to 10 turns using the tape as reference. Do not overtighten the shift knob.

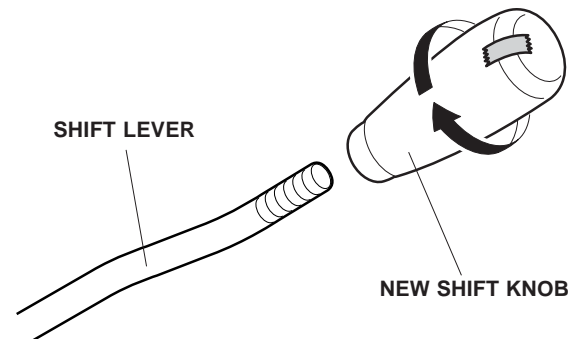

4. Remove the tape.